

SIEMENS

Be inspired

ENGLISH

Gigaset
SL1

DECT



Brief overview

Signal strength
▬▬▬ 100 % ▬▬▬ 75 %
▬▬▬ 50 % ▬▬▬ poor signal
▬▬▬ no signal (flashes)

Talk key
◆ Answer a call
◆ Initiate dialling
◆ Switch from handsfree to "earpiece" mode

Control key
Opens the menu, directory, voice dialling. Navigation in the input field

Handsfree key
◆ Switch from "earpiece" to handsfree mode
◆ Lights up: Handsfree is activated
◆ Flashes: incoming call, automatic last number redial

Open directory

Key 1
Select network mailbox/ answering machine (press for approx. 2 sec.)

Star key
◆ Ringer on/off (press for approx. 2 seconds)
◆ Toggles between upper/ lower case and digits for text input

Recall key
Insert a dial pause (hold key down)

Display (display screen)

Charge status
☐ flat ☐ fully charged
☐ flashes: battery is almost flat or is charging

Current functions and display keys
The display keys give you access to the functions shown in the display.

End call key, On/Off key
◆ End call
◆ Cancel function
◆ One menu level back (short press)
◆ Back to idle status (press for approx. 1 second)
◆ Handset on/off (press for approx. 2 seconds)

Message key
◆ Access to calls and messages list
◆ Flashes: new messages and calls

Hash key
Keypad lock on/off (press for approx. 1 second)

Speed dial list key
Open the speed dial list (short press)

Microphone

Socket for headset and PC interface

Illustration of a handset that is registered to a base with SMS functionality.

Contents

Brief overview	2
Safety precautions	5
Preparing to use your phone	6
Preparing to use the handset	6
Registering	7
Changing the display language	7
Changing the base	8
Attaching the belt clip	8
Activating/deactivating the handset	8
Activating/deactivating the keypad lock	8
Operating the telephone, menu guidance	9
Keys	9
Main menu	10
Date and Time	11
Setting the date and the time	11
Setting the alarm clock	11
Setting an appointment	12
Making calls	13
Making external calls and ending a call	13
Internal calls, ending a call	13
Answering a call	13
Handsfree	13
Muting the handset	14
Using the directory and other lists	14
Directory and speed dial list	14
Managing entries in the directory and speed dial list	15
Voice-activated dialling	16
Linking a call-by-call number with a phone number	17
Last number redial list	17
Email directory	18
Display available memory	18
Using several handsets	19
Internal consultation calls	19
Accepting/rejecting call waiting during an internal call	19
Using a handset as a room monitor	19
Setting the Walk and Talk mode	20

Contents

Handset settings	22
Activating/deactivating Auto Answer	22
Adjusting the loudspeaker volume	22
Changing the ringer tone	22
Sound Manager	23
Activating/deactivating advisory tones	24
Restoring the handset factory settings	24
Appendix	25
Care and contact with liquid	25
Customer Care	25
Specifications	26
Character set chart	26
Predictive text	27
PC Interface	28
Play "Balloon Shooter"	29
Warranty Certificate Ireland	30
Index	31

Safety precautions



Only use **the power supply unit supplied**, as indicated on the underside of the device.



Fit only the **recommended rechargeable battery (page 26)**! Do not use any other type of battery or a non-rechargeable battery, as this could damage health and cause personal injury.



Insert the rechargeable battery ensuring correct polarity, and use it as directed in these instructions.



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive 'hum' in hearing aids.



The handset is not watertight (page 25).



Drivers must not use their phones while driving (Walk and Talk function).



Switch off your phone while on board an aircraft (Walk and Talk function). Ensure that it cannot be switched on again accidentally.



Do not use the phone in environments subject to explosion hazard (e.g. auto paint shops).



Ensure that your Gigaset is accompanied by these instructions when you give it to others to use.



Dispose of the battery and phone in accordance with environmental regulations.

i

Not all of the functions described in these instructions are available in all countries.

Preparing to use your phone


The pack contains:

one SL 1 handset, one charger with power supply unit, one belt clip for the handset, one battery, one set of operating instructions.

Preparing to use the handset

The display is protected by a plastic film. **Remove the protective plastic film!**

Inserting the battery

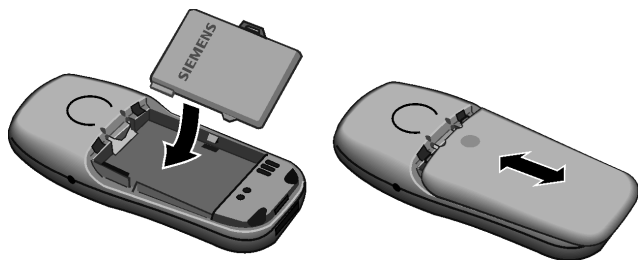


- ◆ Insert the battery **ensuring correct polarity** – see figure on left.
- ◆ Position the battery cover so that it is **open by around 3 mm**, then slide **up** until it closes with a click,
- ◆ **To open** the battery cover, press on the recessed area and slide **down**.



Use only the rechargeable battery recommended by Siemens on page 26! Never use a conventional battery (non-rechargeable) or other battery type as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed (hazardous). The phone could also malfunction or be damaged.

Charging the battery

Place the handset in the charger with the **display facing the front**. Now leave the handset in the charger for the battery to charge – the battery is supplied uncharged. Battery charging is indicated in the top right of the display by the flashing battery icon .



For the initial charge we recommend a continuous, uninterrupted charging period of five hours, whatever charge status is indicated. After a while the charge capacity of the battery will decrease for technical reasons.






The battery charging status is correctly displayed only after **uninterrupted charging/discharging**. You should therefore avoid removing the battery unnecessarily and ending the charging process prematurely.

<i>i</i>	<ul style="list-style-type: none"> ◆ Once initial charging is complete, you can replace your handset in the charging shell after each call. Charging is controlled electronically. This ensures that the battery is charged in a way that maximises its life. ◆ The battery heats up during charging. This is normal and not dangerous.
----------	---

Registering

Before you can use your Gigaset SL 1 you must **register it manually**. You must initiate handset registration on the handset and on the base.

1. On the handset

		Open the menu.
	H/Set Settings <input type="button" value="OK"/>	Select the menu item and confirm.
	Register H/Set <input type="button" value="OK"/>	Select the menu item and confirm.
	Base 1 <input type="button" value="OK"/>	Select base (1–4) and confirm, e.g. Base 1 .
	<input type="button" value="OK"/>	Enter the system PIN of the base (the default is 0000) and confirm.




 

Base 1 flashes in the display when the system PIN has been entered.

2. On the base




 
Please refer to the operating instructions for the base to find out how to initiate handset registration on the base.

Changing the display language

You can view the display texts in different languages.

		Open the menu.
	H/Set Settings <input type="button" value="OK"/>	Select the menu item and confirm.
	Language <input type="button" value="OK"/>	Select the menu item and confirm. The current language is checked ✓ (the default setting is English).
	<input type="button" value="OK"/>	Select a language and confirm.
		Long press (back to idle status).





You have selected a language in error:

Press   , select the correct language with  and then press to confirm.


Preparing to use your phone

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).


- ;  **H/Set Settings** **OK**;  **Select Base** **OK**;
-  (select registered base or **Best Base**) **OK**.


Attaching the belt clip

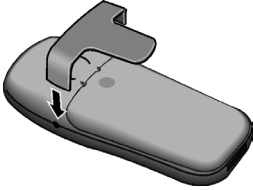

Push the belt clip onto the back of the handset until the lugs click into the recesses on either side of the handset.



Activating/deactivating the handset


To **activate**: press the 'end call' key  **and hold**.

To **deactivate**: press the 'end call' key  again in the idle status **and hold**.

The handset activates automatically when placed in the charger.

Activating/deactivating the keypad lock

Press the hash key  **and hold** (the  icon appears in the display).

To **deactivate/unlock**: press the hash key  **again** and hold.

The keypad lock deactivates automatically when you receive a call. It re-activates when the call is finished.


i

When the keypad lock is active, you cannot even call emergency numbers.

Operating the telephone, menu guidance


Keys

Control key





The control key has four black arrows and associated icons. A certain function is activated depending on which side of the key you press. In the operating instructions, the side you must press is highlighted in black, e.g. key  for right = Open Menu.

You can also use the **control key** to execute many of the functions of the **right-hand display key**.

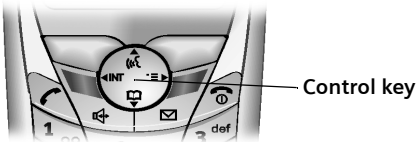Example:



 
Different functions of the control key:

	In the idle status	In lists and menus	In an input field
	Initiate voice-activated dialling (long press)	Scroll up	Move the cursor up a line
	Open directory	Scroll down	Move the cursor down a line
	Open the menu	Confirm the selected option (same as OK)	Move the cursor to the right
	Open list of handsets	Go back one menu level, or cancel	Move the cursor to the left

Display keys





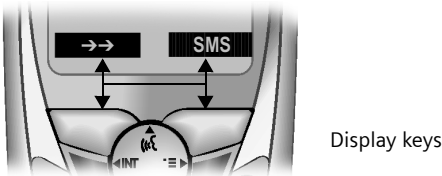

The display keys are the **horizontal rocker keys** just below the display. Their function changes depending on the particular operating situation. The current function is shown in the display directly above the key to which it relates.

Example:




Operating the telephone, menu guidance

The various icons have the following meanings when the keys are pressed:


 
	Last number redial key: Open the list of the last 10 numbers you dialled.
	OK key: Confirm menu function or confirm an input and store.
	Menu key: Open the main menu when in idle status Open a status-dependent menu while making a call.
	Delete key: Delete input from right to left one character at a time.
	Escape key: Go back one menu level, or cancel the operation.
	Open email directory.

Reverting to idle status from anywhere in the menu

Press the 'end call' key  for around 1 second, or do not press any key.

The display automatically reverts to the idle status after 2 minutes. Changes which you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or with **Save Entry** **OK** will be lost.

Main menu

To open the main menu, press the right side of the control key  with the phone in the **idle status** and scroll to the required option with .

1	SMS	
2	Select Services	
3	Add. Features	The menu options that are available will depend on your base.
4	Calendar/Clock	
5	Audio Settings	
6	Call Charges	
7	H/Set Settings	
8	Base Settings	
9	Answer Machine	

Date and Time

Setting the date and the time

Correct date and time settings are essential if you want to know exactly when calls were received.

; **Calendar/Clock** **OK**; **Date/Time** **OK**; (enter day/month/year); (to the next line); (enter hours/minutes); (to the next line if necessary); (select the 12 or 24 hour clock display); **Save**; (back to idle status).

If you have selected the 12 hour display, on the **Time:** line you can use the display key **am/pm** to toggle between **am** and **pm**.

Setting the alarm clock

Precondition: The date and time have already been set (page 11).

Activating and setting the alarm clock

; **Calendar/Clock** **OK**; **Alarm Clock** **OK**; (select **On**); (enter the wake-up time); **Save**; (return to idle status).

If you have selected the 12 hour display, on the **Time:** line you can use the display key **am/pm** to toggle between **am** and **pm**.

A wake-up call will only work when the handset is in the idle status, it will not work when the Room Monitor or Walk and Talk functions are activated, or during a call or an automatic redial.

To find out how to set the volume and melody, turn to page 22.

Deactivating the alarm clock

The alarm clock is set to a particular time but you do not want it to ring.

; **Calendar/Clock** **OK**; **Alarm Clock** **OK**; (select **Off**); **Save**; (return to idle status).

Deactivating the wake-up call

Press the display key **Silence** or **any key**.

Setting an appointment

You can use your handset to remind yourself of up to five appointments.

Activating and setting an appointment

; **Calendar/Clock** **OK** ; **Set Appoints.** **OK** ; **Appoint. 2** (example) **OK** .
 (select **On**); (enter day/month); (enter hours/minutes);
 Edit; (enter name) **OK** ; **Save**; (back to idle status).

Once set, an appointment is displayed with the icon.

An appointment call will only work when the handset is in the idle status, it will not work when the Room Monitor or Walk and Talk functions are activated, or during a call or an automatic redial.

If you have selected the 12 hour display, on the **Time:** line you can use the display key **am/pm** to toggle between **am** and **pm**.

To find out how to set the volume and melody, turn to page 22.

Deactivating an appointment call

When the appointment calls sounds, you can deactivate it with **Silence**.

Viewing and deleting missed appointments, anniversaries etc.




; **Calendar/Clock** **OK** ; **Missed Dates** **OK** ; select appointment/ anniversary).

Delete	Press the display key.
... then	
	Long press (back to idle status).


A missed appointment is indicated by , a missed anniversary by .

Making calls

Making external calls and ending a call

 (enter the number) and press  (the 'talk' key) – the sequence does not matter.
To **end** a call/cancel dialling: press  ('end call' key).







Dialling pause

You can insert a dialling pause between the prefix and the actual telephone number.
To do this, press  for around 2 seconds. Now enter the telephone number.




Internal calls, ending a call

Calls to other handsets that are registered to the same base are free of charge.




Calling a specific handset

;  (select handset); press . **Or:** Press   (example).
To **end the call:** press  ('end call' key).

Calling all handsets ("group call")

; press  (star key).
To **end the call:** press  ('end call' key).

Answering a call



Your handset rings, the call is displayed and the handsfree key  flashes. Press  (Talk key) (**or** display key **Accept** **or** handsfree key .

If the **Auto Answer** function is activated (page 22) you just need to lift the handset out of the charger to take the call.


If the **ringer is intrusive**, press the display key **Silence**. You can take the call so long as it is displayed on the screen.


Handsfree

Activating/deactivating handsfree

Before you dial:  (enter the number); press  (the handsfree key).

During a call: press  (the handsfree key).

To **deactivate:** press  (the Talk key).


If you wish to place the handset in the charger during a call you must press the handsfree key  and hold it down as you do so.



i

You should inform your caller that you intend to use the handsfree function before you activate it.

Using the directory and other lists


Adjusting the volume while in handsfree mode during a call

A call is in progress and handsfree  is activated.

Press  (the handsfree key) **again**;  volume softer or louder; **Save**.

Muting the handset


. The call is "held" (wait melody).


To **end the call**: press the display key .

Using the directory and other lists




Directory and speed dial list

You can store up to 200 numbers in the directory and the speed dial list.




You open the **directory** with the  key. You can store an anniversary/birthday for every directory entry and mark the entry as "VIP".





The **speed dial list** is a special directory in which you can store particularly important numbers such as private telephone numbers and prefixes of network providers (so-called "call-by-call numbers"). You open the speed dial list with the  key.

The speed dial list is operated in just the same way as the directory, except for the way in which entries are stored.

- ◆ The **EATONI** predictive text helps you input names (page 27), this feature is deactivated when you purchase your phone).
- ◆ Please refer to the **Character Set Chart** (page 26) to see how to enter text correctly.
- ◆ You can enter up to 32 digits for a number and up to 16 letters for a name.
- ◆ When entering a number you can insert the required pause with ,  **Insert Pause** **OK** or by pressing  for about 2 seconds.




Storing a telephone number in the directory

 (open directory); **New Entry** **OK**;  (enter the number);  (to the next line);

 (enter name);  (open menu); **Save Entry** **OK**; (To enter an anniversary as well, **after** you have entered the name: press  to go to the **Annivers.:** line, press the display key **Edit** and enter the date. Press **Save**.); press  **and hold** (return to idle status).

To delete an anniversary, in the directory entry in the **field for the anniversary**, press the display key **Edit**, then when the display changes press the display key **Delete** and finally after another display change press **Save**.


Anniversary reminder call

The handset sounds a reminder call with the selected ringer melody. The display shows the directory entry with   .


 


i

If your phone is connected to a PABX you may have to enter the access code (outside line code) as the first digit of your directory entry.

Storing a telephone number in the speed dial list





You can assign one of the digits 0, 2–9 to **up to nine** entries on your speed dial list. When you press and hold one of these digits with the handset in the idle status, then press the Talk key , you are immediately connected to the telephone number that is assigned to that digit.

 (open speed dial list); **New Entry**  ;  (enter the number);  (to the next line);  (enter name);  (open menu); **Save Entry** 






(To enter a speed dial digit as well, **after** you have entered the name: press  to go to the **Enter key:** line, press  to select a digit [0, 2–9] for this number, then press the display key ; press  **and hold** (back to idle status).







Speed dial digits cannot be assigned more than once at a time.



Dialling with the directory/speed dial list



 or  (open directory/speed dial list);  (select entry); .

Managing entries in the directory and speed dial list

To use one of the following menu functions, press the directory key  or the speed dial list key . Scroll to the entry with  and then press  to open the menu. Use the  key to scroll to the function you require.

Or:  or ;  (enter first letter); if necessary scroll with  or  enter more letters of the name; .

Display Number	
Edit Entry	
Delete Entry	
VIP Entry	For the directory only ()
Copy and Edit	For the directory only ()
Copy Entry	
Delete List	
Copy List	
Available Memory	

Once you have selected an entry, press the display key  and then  to view / edit it.

The "Mark as VIP" and "copy and edit" functions

You can mark the directory entries of particularly important callers as **VIP** (Very Important Person); this links a particular melody to them. You can then tell who is calling you from the ring melody. **Precondition:** Calling Line Identification.

So that you do not have to enter a similar entry twice, you can create a **copy** and then **edit** that entry.

Using the directory and other lists

Sending a single entry or complete list to a handset

You can send individual entries or the entire list to another SL 1, S1 or C2 handset or a Comfort handset in the Gigaset 4000, 3000 or 2000 series that is registered to the same base. Stored voice patterns and speed dial numbers are not sent. The VIP settings are sent depending on the handset.

or (open directory/speed dial list); (select entry);
 (open menu); **Copy Entry** **OK** or **Copy List** **OK** ;
 (enter the internal number of the receiving handset); **OK** .

You can select further entries provided you confirm with the display key **Yes** after you have sent an entry. Select **No** to stop sending.

Voice-activated dialling

With voice-activated dialling, you dial simply by speaking the name of the person you wish to call. To do this, you must first store a voice pattern, i.e. the name which you speak will be stored in the handset.

Up to four users can store/record a voice pattern per entry. Before he records a voice pattern, the user must "identify" himself, e.g. as **User 2**.

A **maximum** of 23 voice patterns can be stored for directory entries. An entry stored with a voice pattern is indicated by in the voice directory.

Recording a voice pattern for an existing directory entry

Record your voice pattern in quiet surroundings (holding the handset about 25 cm away).

Step 1: Open the directory for voice-activated dialling:

(open directory); (select entry); **View**; **User 2** (example) **OK** .

Step 2: Begin recording:

record; **OK** (Confirm the display prompt). Speak the name when prompted to do so by the display. Repeat the name when prompted again to do so. Your recording is stored automatically.

Press **and hold** (return to idle status).

A message tells you if your speech pattern is **too much like** another user's. Close this message with , go back to the start of the voice pattern recording sequence and repeat the recording.

Using voice-activated dialling: Press **and hold** and speak the name.

Phone announces the caller's name

When you receive an external call, you hear the ringer and the telephone announces the caller's name.

Preconditions: Calling Line Identification. A voice pattern is stored (page 16).

Activating/deactivating the name announcement

(open menu); **Audio Settings** **OK** ; **Ringer Settings** **OK** ; **Ext. Calls** **OK** ;
2x (to the next-but-one line); activate/deactivate (**Announce**); **Save** ;
press **and hold** (return to idle status).

Play the voice pattern

Open the directory for voice-activated dialling (see **Step 1**, page 16). **Now:**

(select an entry); **Play**; press **and hold** (back to idle status).

Changing or deleting voice patterns

Open the directory for voice-activated dialling (see **Step 1**, page 16). **Now:**

(select an entry); (open menu); **Record Name** **OK** or **Delete Name** **OK** ; press **and hold** (return to idle status).

Deleting a voice pattern does not affect the telephone number or name. The voice patterns of other users are also unaffected.

Changing a user name

(open directory); (select an entry); **View** ;
User 2 (example) ; **Edit** ; (enter name) **Save** ;
 press **and hold** (return to idle status).

Linking a call-by-call number with a phone number

This function can be used to put a network provider's prefix (which is stored in the speed dial list) in front of the telephone number ("linking").

(open the speed dial list); (select an entry); **>≡** (open menu);
Display Number **OK** ; (open directory); (select an entry) **OK** ;
 or enter the number; .

Last number redial list

The last number redial list contains the ten last dialled numbers.

Manual last number redial

→→ (open last number redial list); (select an entry); .

Automatic redial

With this function the number is automatically dialled every 20 seconds. When the other party answers the call, press (the Talk key). If the call is not answered, ringing stops after about 30 seconds. The function is cancelled after ten failed attempts.

Press (the 'end call' key); **→→** (open last number redial list); (open menu);
Automatic Redial **OK** .

To **cancel** the redial: press the display key **Off** or **any key**.

Using the directory and other lists

Managing entries in the last number redial list

You can use the following menu functions:

(open the redial list); (select an entry); (open menu); (select function).

Automatic Redial	
Display Number	
Copy to Directory	
Delete Entry	
Delete List	

Email directory

You store email addresses in the email directory. You can store a maximum of 200 entries in the directory, email directory and speed dial list together.

Email directory entries are managed in the same way as normal phone directory entries (page 15).

Storing a new email address

Step 1: Open the email directory:

(open directory) **E-mail Directory** **OK**.

Step 2: Create an email entry:

New Entry **OK**; (enter address); (open menu);

(select , ".", "@" or the predictive text function as required **OK**). With the predictive text activated, press once long and once short.

Step 3: Save an email entry:

(open menu); **Save Entry** **OK**; press **and hold** (return to idle status).

When you have selected an entry, press the display key **View**, then **Edit** and enter the address. Save as described.



Display available memory


The memory space is divided up between the directory, the speed dial list (page 14) and the email directory (page 18). The available memory of all these lists is displayed.

(open directory); (select entry); (open menu); **Available Memory** **OK**; press **and hold** (return to idle status).

Using several handsets

Transferring a call to another handset

 (open internal list); select  (a particular handset or **Call All**); **OK**.

The internal user answers: press  ('end call' key).

If he does not answer or is busy, the call will come back to you automatically (**Recall** appears in the display).

Internal consultation calls

You can make an **internal** call while an **external** call is in progress.

 (open internal list);  (select handset), **OK**.

To **end the call**: press the display key **End** (back to outside caller).

Accepting/rejecting call waiting during an internal call

If you get an external call while conducting an **internal** call, you will hear the call waiting tone (short tone). Press the display key **Accept** or **Reject**.

The rejected call waiting tone can still be heard at other registered handsets.

Using a handset as a room monitor

With this function, a previously stored internal or external number is called when a set noise level in the room is reached. The room monitor **remains activated** on the handset even after you hang up.

The handset should be between 1 and 2 metres away from the baby.

The microphone must be directed towards the baby.

When the room monitor is activated, incoming calls to the handset which is near the baby are indicated **without a ring tone**, they are just shown on the display. The display and the key pad are not illuminated.

When entering an external phone number, make sure that the line to which you want the room monitor to be transferred is not blocked by an activated answering machine.

- ◆ If you redirect your room monitor to an external number, then you should tell that number's owner.
- ◆ The room monitor's call to an **external** phone number stops after about 90 seconds, to an **internal** number (handset) it stops after about 180 seconds (depending on the base).



Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line.



The room monitor function severely curtails the handset's operating time. If necessary you should place the handset which is near the baby in the charger to ensure that the battery does not run down. The room monitor function can also be used in Walk and Talk mode.

Using several handsets

Activating the room monitor function and entering the 'call to' number for the first time

Step 1: Open the input field: ; **Add. Features** ; **Room Monitor** .

Step 2: Activate room monitor: (in the **Room M.:** line, select **On**)

Step 3: Enter the destination number: (to the next line); **Edit**

Enter **internal** number: **INT** (select handset) **or**:

Enter **external** number: ; (open menu); **Save Entry**

Step 4: Set the sensitivity: if necessary press (to the next line); ; **Save**

The room monitor function is now activated.

Once the room monitor is activated, switch directly to the room monitor setting with (open menu).

Deactivating the room monitor

You can deactivate the room monitor **remotely** (depending on the base). Take the call from the room monitor and press . The room monitor function will deactivate around 90 seconds after the call ends. The room monitor will make no further calls. The other room monitor functions on the handset (e.g. no ringer) will remain activated until you press the display key **Off** on the handset that is in the baby's room.

i

To reactivate the room monitor function with the same telephone number, you must turn on the activation again and save with **Save**.

Setting the Walk and Talk mode

The Walk and Talk function allows two handsets (maximum range 300 metres) to call each other no matter how far they are from the base.


Precondition:



- ◆ Both handsets have been registered to the same base (recommended for the room monitor function) **or**
- ◆ Both handsets are registered to different bases and both are set to **Best Base** (page 8) **or**
- ◆ One of the handsets is not registered to any base and the registered handset is set to **Best Base or**
- ◆ Neither handset is registered to a base.

In Walk and Talk mode the handsets cannot be reached by incoming calls. The handset operating times are **greatly** curtailed.


Activating/deactivating the Walk and Talk mode

 (open menu);  **Add. Features**  ;  **Walk and Talk** .

To **deactivate**: press the display key .

Press  (Talk key) or  (handsfree key) The call will go to all handsets that are in Walk and Talk mode. The loudspeaker volume and the advisory tones are set in exactly the same way as if your handsets were in range of the base (page 22). The ringers cannot be set in Walk and Talk mode.

The ringer (page 23) and keypad lock (page 8) can be activated/deactivated in the Walk and Talk mode.




To open the menu, press the display key .



The Walk and Talk mode is retained even when you switch your handset off and back on.

Using a handset in Walk and Talk mode as a room monitor


 (open menu);  **Room Monitor**  ;  (select **On**);

 (to the next line); select  (**Low** or **High**); .

The room monitor will only call handsets that are in the Walk and Talk mode.



Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line. The distance between the handsets should not now be changed (range).

Press the display key  on the room monitor handset to deactivate the room monitor. The handset returns to the normal Walk and Talk mode.

Handset settings

Activating/deactivating Auto Answer

If you have activated this function, when you get a call you can simply lift the handset out of its base or the charger without having to press the Talk key (the default setting is On).

(open menu); **H/Set Settings** **OK**; **Auto Answer** **OK** (✓ = On);
press **and hold** (return to idle status).

Adjusting the loudspeaker volume

You can adjust the handsfree volume on five levels and the earpiece volume on three levels – you can even do this while an external call is in progress.

(open menu); **Audio Settings** **OK**; **Handset Volume** **OK**; (select handsfree volume); (to the next line) (select earpiece volume); **Save**;
press **and hold** (return to idle status).

Ringer echo

You can enhance the sound quality of the long ringer melodies (4-10).

(open menu); **Audio Settings** **OK**; **Ringer Echo** **OK** (✓ = On); press **and hold** (back to idle status).

Changing the ringer tone

You can choose from six volumes and 26 melodies (including 16 polyphonic melodies). Polyphonic melodies are only available if they have previously been recorded with the Sound Manager or downloaded on the PC interface.

Settings for external calls, time control and name announcement

(open menu); **Audio Settings** **OK**; **Ringer Settings** **OK**; **Ext. Calls** **OK**;
 (select volume); (to the next line); (select melody);
 (to the next line if necessary); (activate name announcement, page 16).

Activating time control


 
Select **Time C.**; (select **Time ctrl: On**); go to the line **From:** (4-digit input of the time period); go to the line **Until:** (4-digit input of the time period);


(enter ringer volume); **Save** (save time control); **Save** again (save setting);
press **and hold** (back to idle status).

Individual settings for internal calls, wake-up and appointments

(open menu); **Audio Settings** **OK**; **Ringer Settings** **OK**;
 (select function) **OK**; (select volume); (to the next line); (select melody);
Save (With the **All** setting you must also confirm the prompt with **Yes.**);
press **and hold** (return to idle status).

Activating/deactivating the ringer

All handsets ring when there is an incoming call. To **deactivate** the ringer: press the star key  **and hold**. The  icon appears in the display.

To **activate** the ringer: press the star key  **and hold**.





To cancel the ringer for the **current** call, press the display key **Silence**.

Activating/deactivating the alert tone

When you deactivate the ringer you can activate an alert tone. When you get a call, you will hear a **short tone** (beep) instead of the ring tone.





Press the star key  **and hold** and **within 3 seconds** press the display key **Beep on**.

You will now see  in the display.

To **deactivate**: press the star key  **and hold**.

Vibration alarm





Incoming calls and other messages are indicated by vibration. This setting is separate from the ringer settings.

 (open menu);  **Audio Settings** **OK**;  **Silent Alert** **OK** (✓ = On);
press  **and hold** (back to idle status).



Sound Manager

You can record polyphonic melodies (max. length 4 seconds) or dub them using a data cable (page 28). You can store up to 16 melodies.










Record a melody

 (open menu);  **Audio Settings** **OK**;  **Sound Manager** **OK**;
<New Sound> **OK**; **Record Sound?** **OK**; **Press End** or wait 4 seconds; **Save**;
Edit Entry (enter melody name) **Save**; press  **and hold** (return to idle status).

Play a melody

 (open menu);  **Audio Settings** **OK**;  **Sound Manager** **OK**;
 (select melody); **Play**; press  **and hold** (return to idle status).

Edit entry

 (open menu);  **Audio Settings** **OK**;  **Sound Manager** **OK**;
 (select melody); ; **Volume** **OK** (adjust volume) or  **Edit Entry** **OK** (edit name) or  **View Entry** **OK** (view filename) or  **Delete Entry** **OK**;
press  **and hold** (return to idle status).

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated individually (the default setting is On).

- ◆ **Key click** (every key press is confirmed),
- ◆ **Acknowledge tones** (Confirmation tone, Error tone, End of menu tone),
- ◆ **Battery tone**.

(open menu); **Audio Settings** **OK**; **Advisory Tones** **OK**;

(activate **Key Tones**); (to the next line) (activate **Confirm.**);

(to the next line); (for **Battery**: select **On**, **Off** or **During Call**); **Save**;

press **and hold** (return to idle status).

Restoring the handset factory settings

You can reset individual settings and changes you have made. This will not affect entries in the directory, the calls list, the email directory or the speed dial list, the handset's registration to the base or screensavers and melodies that you have loaded. Press to cancel the reset.

(open menu); **H/Set Settings** **OK**; **Reset Handset** **OK**; **Yes** (confirm the prompt);

press **and hold** (back to idle status)

Factory settings of the handset

Earpiece volume	1	page 22
Handsfree volume	3	page 22
Ringer volume	5	page 22
Time control for ringer	deactivated	page 22
Ringer melody	Melody 1	page 22
Name announcement	deactivated	page 16
Auto answer	activated	page 22
Battery tone/Key click/Confirmation tone	activated	page 24
Display language	country specific	page 7
Alarm clock/appointment	deactivated	page 11/ page 12
Appointment name	deleted	page 12
Last number redial list	empty	page 17
Room monitor/room monitor sensitivity	deactivated/high	page 20

Appendix

Care and contact with liquid

Wipe the handset with a **damp** cloth (use no solvent) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

If the handset should come into contact with liquid, **on no account switch the device on. Remove the battery immediately.**

Allow the liquid to drain out of the device, and then pat all parts of the device dry.

Keep the handset with the battery removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

Customer Care

Our **online support** on the Internet:

www.my-siemens.com/customercare

If you need any repair work, or have a guarantee claim to submit, our

Service-Center Ireland 18 50 77 72 77

will give you quick and reliable assistance. Keep your till receipt handy.

You will find more service numbers in the section entitled "Service" at the end of this booklet.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Country-specific features have been taken into account. The SL1 handset is licensed throughout the EU and in Switzerland.

The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

Excerpt from the original declaration

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured."

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

CE 0682

Specifications

Recommended battery

Lithium-Ion (Lilon), 700 mAh

(correct at time of going to press)

The product is supplied with an approved battery only.

Handset operating times/ charging time

Capacity (mAh)	Standby time (hours)	Calling time (hours)	Charging time (hours)
700	approx. 250 (10 days)	approx. 15	approx. 2.5

These operating and charging times apply only when using the recommended battery.

Character set chart

Standard characters

Press the relevant key repeatedly or hold it down:

	1 x	2 x	3 x	4 x	5 x	6 x	7 x	8 x	9 x	10 x	11 x	12 x	13 x	14 x
	Space	1	€	£	\$	¥	¤							
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	s	7	ß								
	t	u	v	8	ü	ú	ù	û						
	w	x	y	z	9	ÿ	ý	æ	ø	å				
	.	,	?	!	0	+	-	:	;	'	"	'	;	_
	Abc-> 123	123 -> abc	*	/	()	<	=	>	%				
	#	@	\	&	§									

Creating and editing text (without predictive text)

- ◆ The cursor is controlled with .
- ◆ Characters (to the left of the cursor) are deleted with **C**.
- ◆ Characters are added to the left of the cursor.
- ◆ To switch from upper case (first letter upper case, all other letters lower case) to lower case, press before you key in the letter. Pressing again switches from lower case letters to digits. Press again to return from digits to upper case letters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

- ◆ When you press a key **and hold it**, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.
 - You can see in the display whether upper case, lower case or digits are selected:
 - 'A' or 'a' appears on the bottom display line when you make an entry in the directory.

Order of directory entries


1. Space (shown here as **␣**)
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To work around the alphabetical order of the entries in the directory, insert a space before the name. This entry then goes to the first position (example: "**␣**Carla"). You can also number the entries with digits (e.g. "1Jane", "2Mary", "3John").

Predictive text

The EATONI predictive text helps you to write names (in the directory, speed dial list or email directory).

Each key between **0+** and **9+** is assigned **several letters and characters** which all appear on a **selection line** immediately above the display keys (beneath the text area) as soon as you press a key. When you are entering letters, the letter you are **most probably** looking for is **reverse highlighted**. This letter is at the beginning of the selection line and is transferred to the text area.

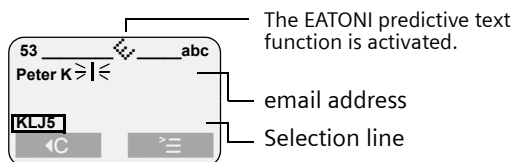

If this letter is the one you want, confirm it by pressing the next key. If the letter selected by the EATONI is not the one you want, then press the **hash key** **repeatedly** until the required letter appears reverse highlighted in the display line and is transferred to the text area.

	Press the star key briefly : Switches from abc to Abc, from Abc to 123 and from 123 back to abc mode.
	Goes to the next letter in the selection list.

Activating/deactivating predictive text

Predictive text is activated and deactivated according to specific functions.

Precondition: You are in a text input field (name in the directory, speed dial list or email directory).

(open menu); **Predictive Text** **OK** (✓ = On);

give the 'end call' key a **short press** to return to the text field. Now enter your text.

PC Interface

You can connect the SL 1 handset to your PC with a Siemens data cable. Your PC can now communicate with your SL 1 by means of the "Siemens Data Suite" software (downloaded free from <http://www.my-siemens.com/gigaset-sds>) and access the following handset parameters and lists:

Read parameters

- ◆ Software version
- ◆ Type
- ◆ Manufacturer's code

Read/write access to

- ◆ The telephone directory
- ◆ The email directory
- ◆ The network provider list
- ◆ The appointments list
- ◆ The last number redial list

Read/write access to other parameters

- ◆ Ringer settings
- ◆ Volume settings
- ◆ Load screensavers
- ◆ Load melodies
- ◆ Make and answer telephone calls

Data transfer

With some functions, large amounts of data are transferred between the handset and the external device (PC). In this case the handset switches to data transfer mode, and **Data Transfer** appears in the handset display. When the handset is in this mode you cannot make any inputs on the keypad, and incoming calls are ignored.

The handset goes into data transfer mode in the following cases:

- ◆ Read/write access to the telephone directory
- ◆ Read/write access to the email directory
- ◆ Read/write access to the network provider list
- ◆ Read/write access to the appointments list
- ◆ Read/write access to the last number redial list
- ◆ Load screensavers
- ◆ Load melodies

The handset returns to idle status automatically if any errors occur during data transfer.

Make and answer telephone calls

If you dial a number from the external device or answer a call from it, the handset will behave exactly as if you carried out these functions on the handset.

Play "Balloon Shooter"


Try to hit as many balloons as possible.




→ **Add. Features** → **Balloon Shooter**

either ...	Start the game:
Start	Press the display key.
or ...	Other options:
	Press the display key to open the options menu.

To aim the cross-hairs, press:

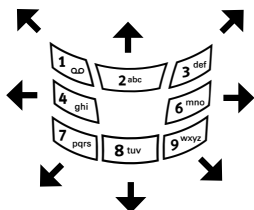

or

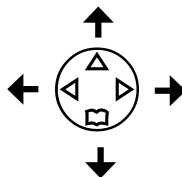

To shoot the balloon down, press .

Warranty Certificate Ireland

- ◆ Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:
- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work is done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 – The Republic of Ireland.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To make a claim under this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Index

A

- Acknowledge tones 24
- Activate
 - alarm clock 11
 - appointment 12
 - keypad lock 8
 - Walk and Talk. 21
- Activation
 - handset. 8
- Advisory tones 24
- Alarm clock. 11
- Alert tone 23
- Anniversary 12
- Appointment 12
- Auto answer 22

B

- Balloon Shooter 29
- Battery
 - charging 6
 - display 6
 - inserting 6
 - recommended battery 26
- Battery tone 24
- Belt clip 8
- Best base 8
- Block
 - keypad lock 8

C

- Call transfer 19
- Call waiting (internal call) 19
- Call-by-Call numbers 14
- Cancel (operation) 10
- Care of the telephone 25
- Changing the base 8
- Character set chart 26
- Charging status display 6
- Confirmation tone. 24
- Consultation call (internal) 19
- Control key. 9
- Cursor 9
- Customer Care 25
- Customer Care (Service) 25

D

- Date and time 11
- Date setting. 11
- Deactivate
 - appointment call 12
 - handset 8
 - keypad lock 8
 - ringer (handset) 23
 - wake-up call 11
- Delete (voice pattern) 17
- Delete key 10
- Dialling pause 13
- Directory 14
 - opening the 9
 - order of entries. 27
 - send an entry to a handset 16
 - storing a number 14
- Display
 - 12/24 hour display 11, 12
 - changing language. 7
 - keys 9
 - memory. 18

E

- Earpiece mode. 2
- Earpiece volume 22
- EATONI, see Predictive text
- Email directory 18
- End call 13
- Enter
 - appointment 12
 - birthday/anniversary. 12
 - wake-up time 11
- Enter birthday (as appointment). 12
- Error/Error tone 24
- Escape key. 10

F

- Factory settings of the
 - handset 24

G

- Group call 13

Index

H

- Handset
 - activate/deactivate 8
 - belt clip 8
 - change for best reception 8
 - change to another base 8
 - list 9
 - muting 14
 - operating and charging times 26
 - preparing to use 6
 - register on another base 8
 - restore factory settings 24
 - use as room monitor 19
- Handset charging time 26
- Handsfree 13
- Hash key 8
- Hearing aids 5

I

- Internal
 - calls 13
 - consultation 19

K

- Key 1 (fast access) 2

Keys

- cancel 10
- control key 9
- display keys 9
- Escape/Menu/Delete/OK 10
- key click 24
- key press (confirmation tone) 24
- keypad lock 8
- last number redial key 10

L

- Language, see Display
- Last number redial 17
- Last number redial list 17
- List
 - email directory 18
 - handsets 9
- Loudspeaker volume 22

M

- Making calls 13
 - answering a call 13
 - external 13
 - internal 13
- Medical appliances 5
- Melody
 - polyphonic 23
- Memory 18
- Menu
 - back one menu level 10
 - end tone 24
 - guidance through the menu 9
 - key 10
 - opening the 9
- Microphone 2
- Missed
 - anniversary 12
 - appointment 12
- Muting (handset) 14

N

- Network provider (number list) 14
- Number, see also Tel. Number or Entry 14

O

- Open
 - directory 9
 - menu 9
- Operating time
 - in Walk and Talk mode 20
 - of the handset 26
 - of the room monitor 19
- Operation (preparing to use your phone) 6
- Order in directory 27

P

- Pack contents 6
- PC Interface 28
- Play (voice pattern) 17
- Polyphonic melodies 23
- Power supply unit 5
- Predictive text 27
- Preparing to use (the phone) 6
- Protective plastic film 6

R

Reminder call	14
Ringer	22
Ringer echo	22
Room monitor	19

S

Safety precautions	5
Saving	
speed dial list entry	15
Select (menu option)	9
Select option (menu)	9
Send a directory entry	16
Service	25
Setting	
alarm clock	11
appointment	12
date	11
display language	7
earpiece volume	22
loudspeaker volume	22
ringer volume	22
time	11
Signal strength	2
Signal tone, see Advisory tones	24
Sound Manager	23
Specifications	26
Speed dial key	14
Speed dial list	14
store a number	15
Storing	
directory entry	14
Switch off, see Deactivate	11

T

Talk	2
Telephone number	
pick from directory	15
store (directory)	14
Time setting	11
Tone	
error tone	24
Tone (confirmation/error/batt./	
end of menu)	24

V

Vibration alarm	23
VIP (directory entry)	15
Voice patterns	17
Voice-activated dialling	9, 16
Volume	22

W

Wait melody	14
Wake-up call	11
Walk and Talk	20, 21
Warning tone, see Advisory tones	24
Warranty	30

Service

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

www.my-siemens.com/customer-care.

Abu Dhabi	0 26 42 38 00	Luxembourg	43 84 33 99
Argentina	0 80 08 88 98 78	Macedonia	02 13 14 84
Australia	18 00 62 24 14	Malaysia	03 21 63 11 18
Austria	05 17 07 50 04	Malta	00 35 32 14 94 06 32
Bahrain	40 42 34	Mauritius	2 11 62 13
Bangladesh	0 17 52 74 47	Mexico	01 80 07 11 00 03
Belgium	0 78 15 22 21	Morocco	22 66 92 09
Bosnia Herzegovina	0 33 27 66 49	Netherlands	0900-3333102
Brazil	0 80 07 07 12 48	New Zealand	08 00 27 43 63
Brunei	02 43 08 01	Norway	22 70 84 00
Bulgaria	02 73 94 88	Oman	79 10 12
Cambodia	12 80 05 00	Pakistan	02 15 66 22 00
Canada	1 88 87 77 02 11	Philippines	0 27 57 11 18
China	0 21 50 31 81 49	Poland	08 01 30 00 30
Croatia	0 16 10 53 81	Portugal	8 00 85 32 04
Czech Republic	02 33 03 27 27	Qatar	04 32 20 10
Denmark	35 25 86 00	Romania	02 12 04 60 00
Dubai	0 43 96 64 33	Russia	(800) 200 10 10
Egypt	0 23 33 41 11	Saudi Arabia	0 22 26 00 43
Estonia	06 30 47 97	Serbia	01 13 22 84 85
Finland	09 22 94 37 00	Singapore	62 27 11 18
France	01 56 38 42 00	Slovak Republic	02 59 68 22 66
Germany	01805 333 222	Slovenia	0 14 74 63 36
Greece	0 80 11 11 11 16	South Africa	08 60 10 11 57
Hong Kong	28 61 11 18	Spain	9 02 11 50 61
Hungary	06 14 71 24 44	Sweden	0 87 50 99 11
Iceland	5 11 30 00	Switzerland	08 48 21 20 00
India	01 13 73 85 89 - 98	Taiwan	02 25 18 65 04
Indonesia	0 21 46 82 60 81	Thailand	0 22 68 11 18
Ireland	18 50 77 72 77	Tunisia	0 71 86 19 02
Italy	02 66 76 44 00	Turkey	0 21 65 79 71 00
Ivory Coast	80 00 03 33	Ukraine	8 80 05 01 00 00
Jordan	0 64 39 86 42	United Arab Emirates	0 43 31 95 78
Kenya	2 72 37 17	United Kingdom	0 87 05 33 44 11
Kuwait	2 45 41 78	USA	1 88 87 77 02 11
Latvia	7 50 11 14	Vietnam	45 63 22 44
Lebanon	01 44 30 43		
Libya	02 13 50 28 82		
Lithuania	8 22 74 20 10		